

## Outside/ Wall Mount Instructions

1. Find the height for the top of the brackets by adding a  $\frac{1}{2}$ " to the ordered size and measuring up from the floor. This will give a  $\frac{1}{2}$ " for floor clearance.
2. Install a bracket directly over the corners of the window and space the remaining brackets evenly at stud locations between the brackets. For spliced tracks, install two extra brackets at center on stud locations at least 8" apart.
3. Assemble spliced tracks prior to hanging. Slide splice plate into one track and tighten screws, slide plate into other half and repeat as in figure-1.
4. Turn the swivel bracket arms counter clockwise to the left so the attach detail is parallel to the center channel of the track as in figure-2.
5. Lift the track to the swivel brackets and turn clockwise until locked in place. Make sure swivel bracket turns all the way to the recess on the backside of track as in figure-3 Repeat step on all the installation brackets.
6. Attach panels by putting a fastener through each hole at the top of panel and panel carrier, tighten nut on back as in figure-4.
7. Snap valance on front lip of headrail and install valance returns. Slide headrail towards the wall until the returns touch and tighten bracket screws as in figure-5.



Fig-1



Fig-2



Fig-3



Fig-4

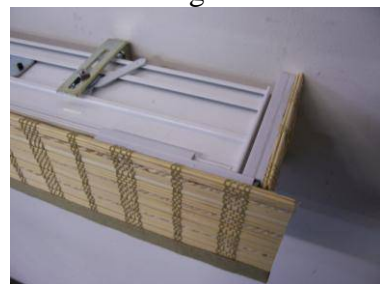


Fig-5