


CLOSING THE GAP ON A CENTER SPLIT VERTICAL

There is a black screw located on the lead carrier. There is a plastic cap this screw holds in place. If you look at the cap you can see that the draw cord makes a turn under this cap. Orient yourself with the direction you will need to feed the cord to either open or close the gap.

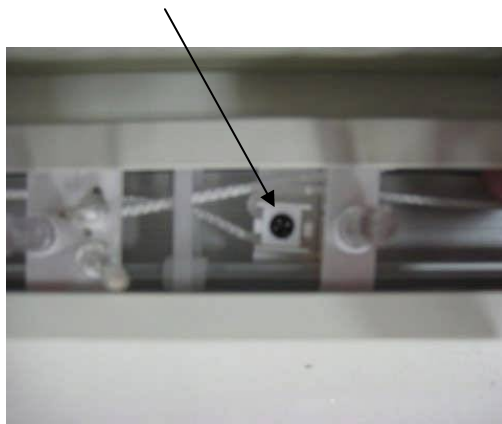

Loosen the black set screw and using tweezers or needle nose pliers, feed the cord to tighten or give more slack. You should be able to accomplish this without taking the set screw completely out. Once the gap has been closed, tighten the screw.

NOTE: Before adjusting the gap, check the ILLUMA-SEAR for proper installation. This product is manufactured with enough slack to fit the vertical ordered. In some cases the way it was installed can keep the blind from closing all the way. Also check that the cord tension pulley is installed correctly, the tension put on the draw cord assists in full closure of the blind.